



Stark VARG MX/SX1 / MX/SX2 inspection procedure


How to activate "Race Mode" - [Youtube Tutorial](#)

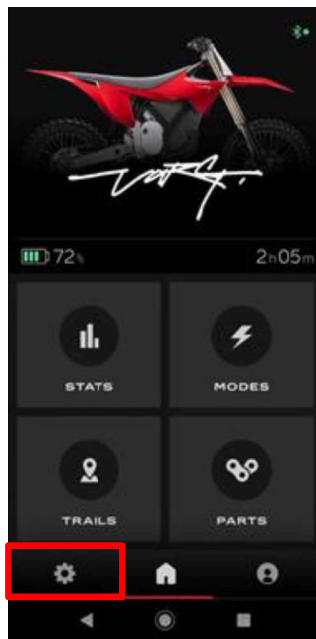


1. On the phone's home screen, go to the Settings

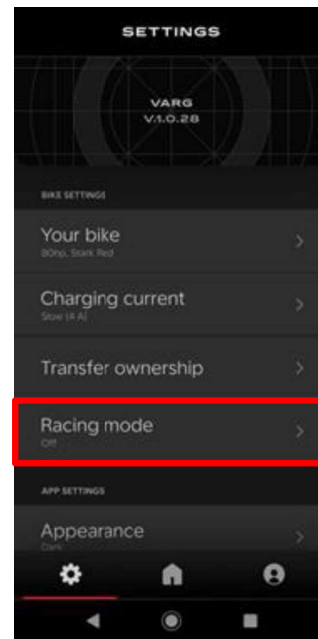

2. Then go to Racing Mode

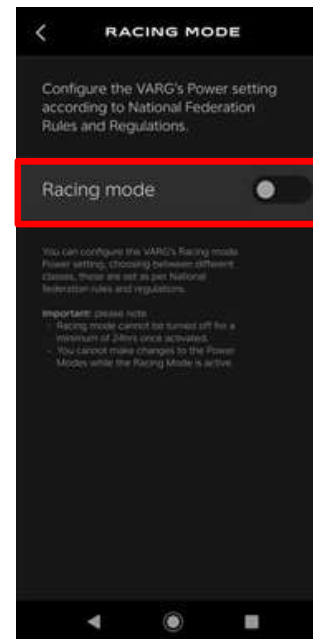

3. Then activate the option


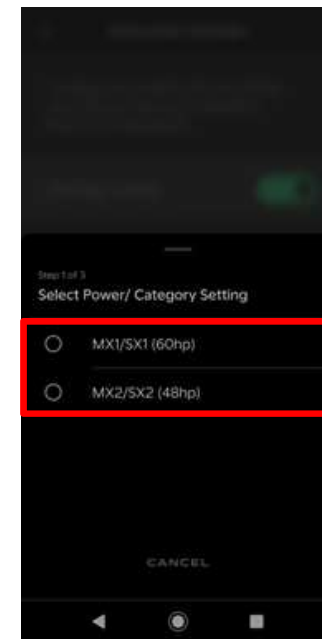


4. You must then select the power and the duration of the power restriction.

Stark VARG MX/SX1 / MX/SX2 inspection procedure

How to activate "Race Mode" - [Youtube Tutorial](#)

5. Then, after checking the power and duration of the restriction, pressing "ACTIVATE" permanently activates the mode and associated maximum power output, however you may choose your 5 power modes UP TO the Max Power output of the category entered.

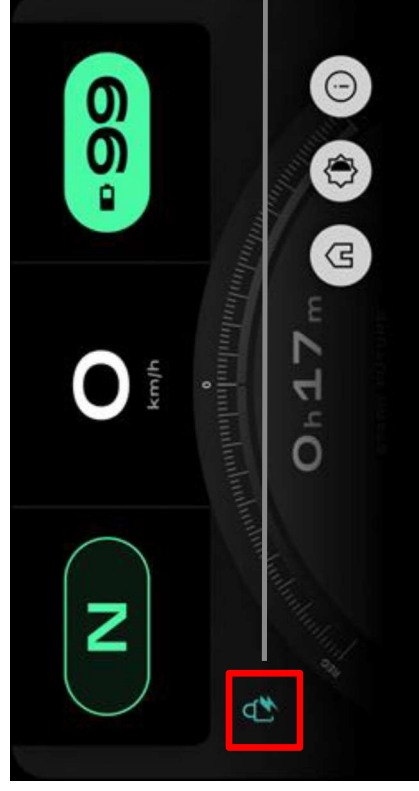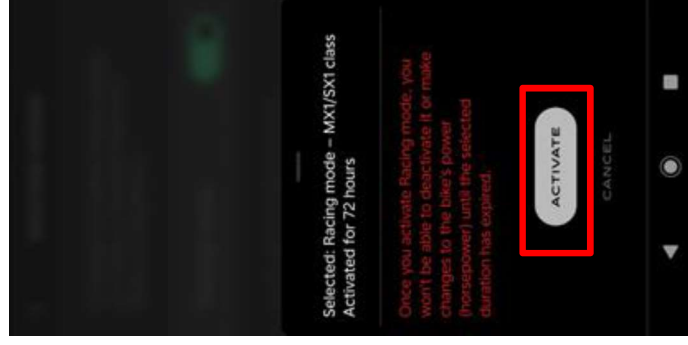

Once the option is activated, a visual cue will appear as indicated on the machine dashboard with one of the following icons:

- MX1 / SX1
- MX2 / SX2

As a secondary visual alert, the LED on the left handlebar switch will permanently display the following colour to indicate the class / maximum power output setting:

- MX1 / SX1: BLUE: 60hp maximum power output.
- MX2 / SX2: WHITE 48hp maximum power output.



UPDATE: Once the VARG is locked, the Rider can choose an HP level within the Locked HP limit.

Example: If a rider is locked in MX1 mode, they can choose from 5 maps with power levels of 40, 48, 55, 58, or 60 HP. The rider can switch between these maps during the ride, but at no point will they be able to select a power level above 60 HP.